




Maxitrol GV60 Remote Control Buttons Legend

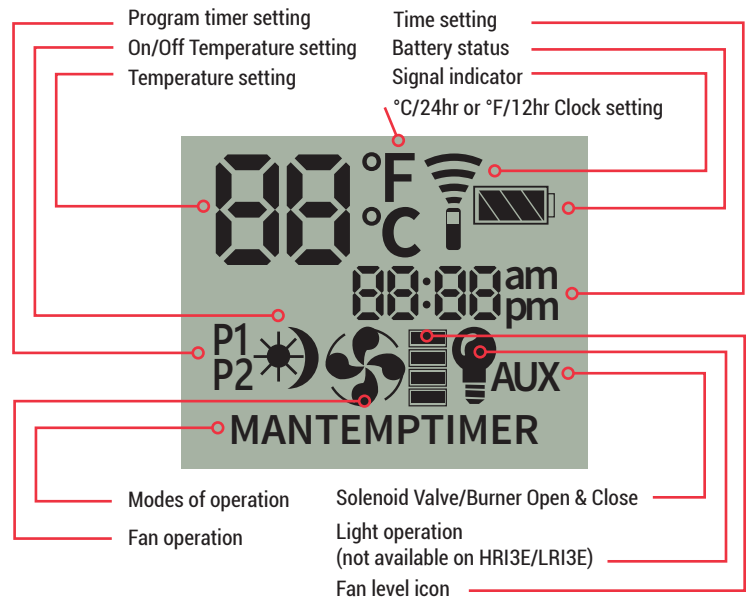

To Turn On The Fireplace

Simultaneously press the OFF **2** and LARGE FLAME **3** buttons until a short beep confirms the start sequence has begun; release buttons. The handset will automatically go into temperature control mode or manual mode.

To Turn Off The Fireplace

Press the OFF **2** button.

For Flame Height Adjustment

When ignition is confirmed, the unit will automatically turn to maximum flame height.

- Press and hold LARGE FLAME **3** button to increase flame height.
- Press and hold SMALL FLAME **4** button to decrease flame height.
- For fine adjustment tap the LARGE FLAME or SMALL FLAME buttons.

For Fan Operation

The circulating fan has 4 speed levels from low (1 bar) to high (4 bars).

- Briefly press the SET **1** button to scroll to fan mode. Fan and Level icons will flash.
- To turn fan on, press LARGE FLAME **3** button until at least 1 speed level appears.
- Press LARGE FLAME **3** button to increase fan speed.
- Press SMALL FLAME **4** button to decrease fan speed.
- To turn OFF fan, press SMALL FLAME **4** button until all 4 speed level bars disappear.



Maxitrol GV60 Remote Control Buttons Legend



For Setting The Time

Simultaneously press the LARGE FLAME **3** and SMALL FLAME **4** buttons.

- Press the LARGE FLAME **3** button to set the hour.
- Press the SMALL FLAME **4** button to minute.
- Press the OFF **2** after setting the time.

°F/12 Hour Clock & °C/24 Hour Clock

The handset has a default setting of °F and a 12 hour clock display.

- Press and hold the OFF **2** and SMALL FLAME **4** buttons until the display changes to the °C and 24 hour clock.

For Modes of Operation

Consult your user guide that was included with your purchase. Or visit the website to download a new user guide.
www.regency-fire.com

Troubleshooting

Q: My remote does not work.

A1: Check the batteries in the handset.

- 1 x 9V (quality alkaline recommended)
- Battery replacement is recommended every season.

A2: Check the batteries in the battery back-up located in the unit

- 4 x 1.5V "AA" (quality alkaline recommended).
- Low battery indication: Frequent beeps for 3 seconds when motor turns. **Do not disconnect the battery back-up.**

Internal damage(s) may occur which are not covered by the manufacturer warranty.

Q: I do not see a pilot flame.

A: This is a feature of the unit. The system shuts off the fire completely if there is no change in flame height for 5 days. To turn back on, follow "To Turn On The Fireplace" instructions.

Q: I live in a cold climate and would like the pilot flame to stay on.

A: Follow "To Turn On The Fireplace" instructions, then press and hold SMALL FLAME **4** button to set the appliance to continuous pilot.