
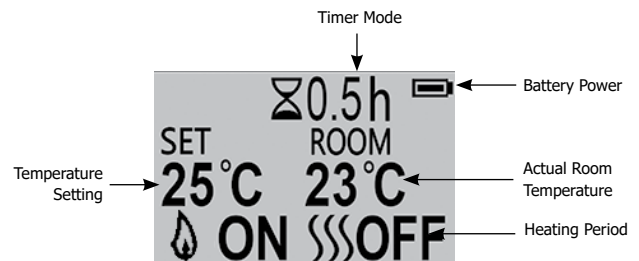


The remote control should be left on a flat surface in the room where the appliance is installed and away from any direct flow of hot air.

BUTTON	FUNCTION	ACTION
	POWER	The POWER button will turn the fireplace on, and enter standby mode. This will turn on/off all the functions at once but will hold the settings in memory.
	FLAME	Press the FLAME button to enter the main flame effect adjustment screen, press '←' and '→' button to cycle through Amber - Amber with Blue - Blue - Off. Press '+' and '-' button to adjust the brightness from 10 -100%, total six settings including Off.
	FUEL BED	Press the button to enter the FUEL BED settings, press '←' and '→' button to cycle through 10 colour options. Press '+' and '-' button to adjust the brightness from 10-100%, total six settings including Off.
	MOOD LIGHT	Press the button to enter the MOOD LIGHT settings, and the setting will cycle through 14 Colour options and Off. Press '+' and '-' button to adjust the brightness from 10-100%, total six settings including Off.
	HEATING	Press the HEATING button, and the heater will cycle the heat setting: AUT - LOW - HIGH - OFF. The AUTO heating will work after the weekly timer has been set on the remote
	-	Press the '←' and '→' button to choose different settings such as the colour settings of the corresponding function.
	-	Press the '+' and '-' button to increase or decrease the settings such as the light setting.

OPERATING THE APPLIANCE - ADVANCED OPERATION

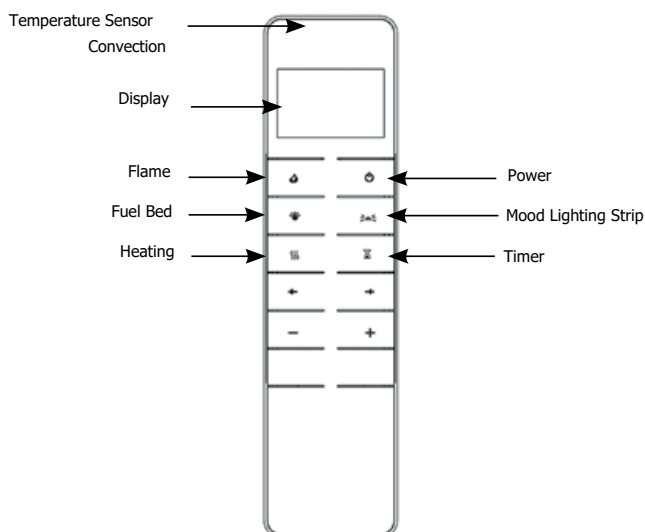

TURN ON/OFF

Press button to turn on the flame effect.

Press button to turn off all the functions under the normal heating control mode.

Press button to turn off the flame effect under daily and week timer heating mode.