


BIRCH 18" LOG PLACEMENT GUIDE

VENT FREE LOGS PART # 946-834

003-166

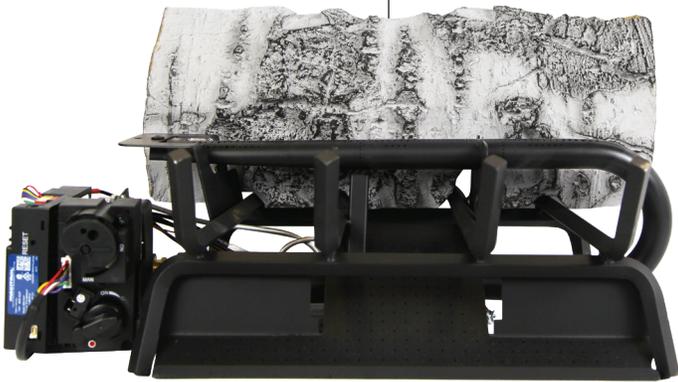

003-167


003-168

003-169



003-170

003-171

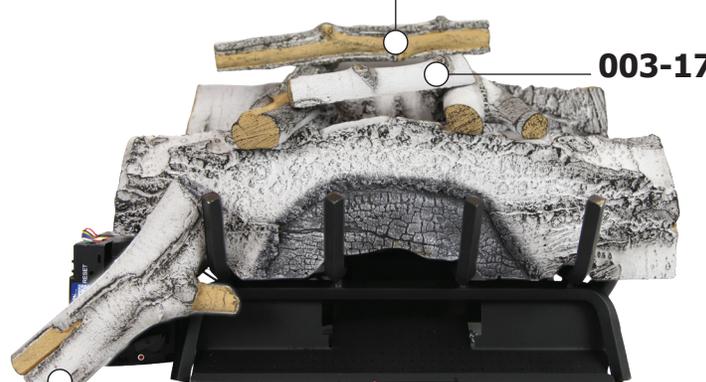

003-172

Checking the Log Placement

After setting the logs from the appropriate log kit into position as described above, ensure each is properly and firmly seated flat in the grooves or notches.

A vent-free gas log set will not function as intended if the logs are not correctly positioned. When placed properly, the flames will not strike any portion of the logs.

Failure to properly place the logs will cause sooting and improper Carbon Monoxide output.

Periodically check the positioning of all logs to ensure proper log placement and stability. If any flame is striking the logs, recheck log placement. Adjust to conform with instructions. There should be no flame impingement on the logs.

Log placement should be re-checked as part of the fireplace maintenance procedure. Logs may not remain in their original position over time.