



# OAK 18" LOG PLACEMENT GUIDE

## VENT FREE LOGS PART # 946-832 003-151

003-150

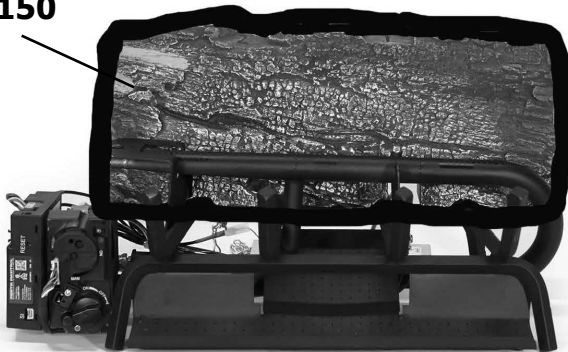

003-151

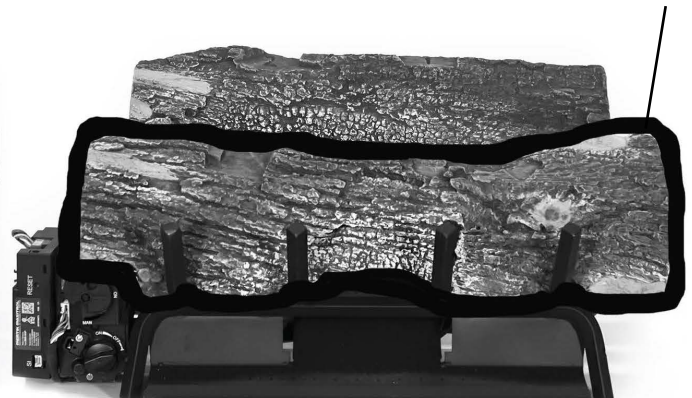

003-153



003-154



003-155

003-156

003-157



### Checking the Log Placement

After setting the logs from the appropriate log kit into position as described above, ensure each is properly and firmly seated flat in the grooves or notches.

A vent-free gas log set will not function as intended if the logs are not correctly positioned. When placed properly, the flames will not strike any portion of the logs.

**Failure to properly place the logs will cause sooting and improper Carbon Monoxide output.**

Periodically check the positioning of all logs to ensure proper log placement and stability. If any flame is striking the logs, recheck log placement. Adjust to conform with instructions. There should be no flame impingement on the logs.

Log placement should be re-checked as part of the fireplace maintenance procedure. Logs may not remain in their original position over time.